



Wiring description

Pin	4-pin socket
1	U frequency converter phase
2	V frequency converter phase
3	W frequency converter phase
4	Wiring ground $\oplus$

Special warning:

1. The electric main shaft shall be installed at the clamped position; otherwise the bearing will be easily damaged!
2. The compressed air shall be dry and clean, and the filtering accuracy shall be 0.1 micron! Atmospheric pressure is 0.1- 0.2MPa, and the air seal shall be normally open. It is recommended to use the two-level filtration, with the filtration accuracy of 0.5 micron/0.1 micron respectively, and the air filter shall have automatic discharge device.

						Two-pole constant power		
						Outline diagram		
						GDK105-9-21Z/2.2-5.0		
Marks	Number of places	Zoning	Modified document number	Signature	Date			
Designed by			Standardized by			Phase mark	Weight	Scale
Reviewed by								
Processed by			Approved by			Total page(s)	Page	